

# LOCKING FUEL DOORS™ - Chrome Plated Aluminum



Steps



**LIFETIME WARRANTY**

## Easy No-Drill Installation! The Highest Quality You Can Buy!

Replace your factory fuel door with one of Westin's custom Locking Fuel Doors. Westin's Fuel Doors are manufactured from high quality cast aluminum then chrome plated for added protection and a custom look. Machined for secure trouble free opening and closing, fits snugly into the factory opening, and covers the area around the gas cap. Give your vehicle that finishing touch. Not only does it look great, but it also gives you added security with a locking door. Easy bolt-on installation makes this a "must have add-on". Protected by a **LIFETIME Warranty** that includes the finish!

	MODEL	CHROME
CHEVY	01-06 CHEVY Avalanche	11-1020
	04-07 CHEVY Colorado	11-1060
	01-07 CHEVY Silverado "Classic" 1500HD	11-1020
	99-07 CHEVY Silverado "Classic" 1500/2500LD	11-1020
	99-07 CHEVY Silverado "Classic" 2500HD/3500	11-1020
	00-06 CHEVY Suburban	11-1020
DODGE	00-06 CHEVY Tahoe	11-1020
	99-07 DODGE Dakota	11-1010
	98-07 DODGE Ram 1500/2500/3500	11-1010
	99-07 DODGE Ram 1500/2500/3500	11-1010
FORD	97-07 FORD Excursion	11-1000
	97-07 FORD Expedition	11-1000
	04-07 FORD F150 (excl. Heritage Edition)	11-1050
	97-04 FORD F150/25LD - Heritage Edition (excl. Supercrew)	11-1000
	99-07 FORD F250/350HD Superduty	11-1000
	99-04 FORD Mustang	11-1000
	04-07 GMC Canyon	11-1060
GMC	01-07 GMC Sierra "Classic" 1500HD	11-1020
	99-07 GMC Sierra "Classic" 1500/2500LD	11-1020
	01-07 GMC Sierra "Classic" 2500HD/3500	11-1020
	00-06 GMC Yukon/Yukon XL	11-1020
	99-06 GMC Yukon Denali/Denali XL	11-1020

# BED X-TENDER™ - Cargo Management System

The original cargo securing system for motorcycles, personal watercraft, landscaping equipment and practically everything else that will fit in your truck bed. Flip the Bed X-Tender™ outward and you just bought yourself a longbed! Flipped inward with the gate closed, the Bed X-Tender™ safely keeps gear like tools, gas cans or groceries from sliding around. For large loads, or little loads, get the most from your truck with a Bed X-Tender™. Removes in seconds, weighs just 9.5" pounds and is tough enough to use as a bench.

- Lightweight 6000 series T6 aluminum tubing.
- High-impact nylon composite and corrosion-resistant hardware.
- Tested in the field and the lab to endure years of abuse.



**3 YEAR WARRANTY**

	Fullsize Standard Bed	Midsize Compact	Fullsize Narrow Bed	FORD F150 Only	Extra Kit
<b>MAZDA</b>	Silver No. 10-0000	No. 10-0010	No. 10-0020	No. 10-0030	No. 10-9900
<b>CHEVY/GMC</b>	Black No. 10-0005	No. 10-0015	No. 10-0025	No. 10-0035	No. 10-9900
		▲			
			▲		
			▲		
			▲		
				▲	
<b>DODGE</b>			▲		
			▲		
<b>FORD</b>			▲		
			▲		
			▲		
		▲			
<b>GMC</b>		▲			
<b>ISUZU</b>		▲			
<b>MAZDA</b>		▲			
<b>MITSUBISHI</b>		▲			
<b>NISSAN</b>		▲			
		▲			
<b>TOYOTA</b>		▲			
		▲			
		▲			▲
		▲			



# SPORTSMAN™ TAIL LIGHT GUARDS

Westin's new Sportsman™ Tail Light Guards are the perfect compliment to the Sportsman™ Grille Guard. Finish the customized look of your vehicle with this durable piece of steel tubing. The lines of the tail light guard have been carefully structured to enhance the lines of the tail light on your vehicle.



**Mitered corners and blended welds.**

**Durable steel tubing with round inset rods to match the look of front guard.**

**LIFETIME WARRANTY**  
For Chrome-Plated Stainless Steel



02-05 **FORD** Explorer  
#39-3270

**FOOTNOTE:**

- \* Requires minor drilling.
- 1 Excludes Stepside/Flareside/01-03 Supercrew models.
- 2 Excludes models with dual rear doors.
- 3 Excludes 2002 models sold in 2001.



99-02 **CHEVY** Silverado  
#39-3030



99-04 **JEEP** Grand Cherokee  
#39-3125



99-02 **CHEVY** Silverado  
#39-3035



04-07 **DODGE** Durango  
#39-3375

	YEAR	MODEL	BLACK	CHROME
<b>CHEVY</b>	04-07	Colorado	39-3365	39-3360
	03-07	Silverado "Classic" 1500/2500LD	39-3285	39-3280
	03-07	Silverado "Classic" 2500HD/3500	39-3285	39-3280
	01-07	Silverado "Classic" 1500HD/2500HD/3500 (1)	39-3035	39-3030
	00-06	Suburban (2)	39-3185	39-3180
	00-06	Tahoe (2)	39-3185	39-3180
	97-04	Dakota (*)	39-3055	—
<b>DODGE</b>	04-07	Durango	39-3375	39-3370
	02-07	Ram 1500 - ('03-'07 - 2500/3500)	39-3265	39-3260
	01-04	Escape	39-3355	39-3350
<b>FORD</b>	00-07	Excursion	39-3115	—
	03-06	Expedition	39-3325	39-3320
	02-05	Explorer - 4-door (excl. Sport)	39-3275	39-3270
	04-07	F150 (excl. Heritage Edition) (1)	39-3305	39-3300
	97-04	F150/250LD - Heritage Edition (*,1)	39-3095	39-3090
	99-07	F250/350HD Superduty (excl. Excursion) (*)	39-3095	39-3090
	98-07	Ranger	39-3345	39-3340
	04-07	Canyon	39-3365	39-3360
	03-07	Sierra "Classic" 1500/2500LD	39-3285	39-3280
	03-07	Sierra "Classic" 2500/3500HD	39-3285	39-3280
<b>GMC</b>	00-06	Yukon/Yukon XL/Yukon Denali (2)	39-3185	39-3180
	99-04	Grand Cherokee	39-3125	—
<b>JEEP</b>	02-06	Liberty	39-3415	39-3410
	05-07	Tacoma	39-3395	39-3390
<b>TOYOTA</b>	05-07	Tacoma	39-3385	39-3380



More products are available, ask your sales person for details

# BIG COUNTRY

## TRUCK ACCESSORIES

### Safari Rack

#### FEATURES

- ▶ Installs over factory or aftermarket cross bars.
- ▶ Includes four light tabs to mount auxiliary driving lights.
- ▶ Side plate features tie down points for secure load management.
- ▶ Ideal for use with luggage bags or tarps.
- ▶ Designed to accept up to three bicycle rails.
- ▶ Optional net secures gear. Optional Bracket for shovel or jack
- ▶ Helps carry useful 4x4 equipment.
- ▶ Optional Spare Tire bracket permits carrying wheel on basket top.
- ▶ Choose black tubular construction with T-304 brushed stainless fairing and side plates or silver tubular with black fairing and side plates.



**220866**

Luggage bag for easy transport over the Safari rack.



**760130**  
Spare Wheel Bracket

**760180**  
Net



**760110**

The pads allow you to transport Surf boards without scratches.



**760120**

Shovel & spare wheel brackets to install them very tight.



Side plate features tie down points.



Universal mounting kit installs over factory and aftermarket crossbar racks.

safari rack



PART No.	DESCRIPTION	WIDE	LENGTH	HEIGHT
760061	Safari Rack black small	40"	32"	6"
760067	Safari Rack silver small	40"	32"	6"
760051	Safari Rack black medium	40"	48"	6"
760057	Safari Rack silver medium	40"	48"	6"
760071	Safari Rack black big	40"	60"	6"
760077	Safari Rack silver big	40"	60"	6"
760031	City Rack	40"	48"	6"
760081	Black Cargo Rack for 2" hitch	20"	60"	6"
760180	Net			
760110	Surf Pads			
760120	Shovel bracket			
760130	Spare Wheel bracket			
760140	Shovel			

Some parts are not legal for sale or use in California on pollution controlled vehicles




# TRUX STUFF

TRUCK AND SUV ACCESSORIES

## 'PLAIN-PAD' STEP BARS

**3716940**

Ford F-150 Crew Cab 04-06

**3" ROUND  
POLISHED  
STAINLESS STEEL**

**TRUX STUFF** Side Bars are a custom fit for each application and require **NO DRILLING** for simple installation. Our Side Bars are precision-formed on computer-controlled equipment using 3" diameter tubing based on our ISO-9001:2000 certified quality standards. Available in polished finish. Each Side Bar is hand polished. The Side Bars also features a non-slip, black composite step. You won't find a better fitting, better finished, more durable side bars anywhere. All necessary hardware, brackets and instructions are included.



**3720140**

Chevy/GMC Crew Cab 01-06

MAKE	VEHICLE	YEAR	PART No.
Chevrolet	Colorado Crew Cab	04-06	3710440
Chevy/GMC	Avalanche 1500 (fits with & without cladding)	02-06	3707940
Chevy/GMC	Silverado 2500 HD/3500, Sierra. Crew Cab. 4 dr.	01-06	3720140
Chevy/GMC	Silverado 1500/2500, Sierra Cheyenne Ext. Cab. 3&4 dr.	99-06	3717640
Chevy/GMC	Silverado 1500/2500, Sierra, Cheyenne Reg.Cab.	99-06	3707440
Dodge	Dakota Quad. Cab. 4 dr. 2x4	05-06	3712540
Dodge	Ram Quad. Cab 1500,2500,3500 (new body style)	02-06	3712340
Dodge	Ram Reg. Cab.	02-06	3712140
Ford	F-Series Super Cab.(new body style)	04-06	3712940
Ford	F-Series Super Crew Cab. (new body style)	04-06	3716940
Ford	F-Series Reg. Cab. (new body style)	04-06	3713340
Ford	F-Series Super Cab. 3 & 4dr. (Heritage 04)	97-03	3702940
Ford	F-250HD, F-350 Super Duty Super Cab.	99-06	3703240
Ford	F-250HD, F-350, F-450, F-550 Super Duty Crew Cab.	99-06	3703040
Ford	F-250HD, F-350, F-450, F-550 Super Duty Reg. Cab.	99-06	3703940
Nissan	Titan Crew Cab	04-06	3705940
Toyota	Tacoma Double Cab Short Bed	05-06	3718840
Toyota	Tundra Double Cab	04-06	3718940
Toyota	Tacoma Double Cab Standard Bed	05-06	3718740
Toyota	Tacoma Extended Cab	05-06	3718340
Dodge	Mega Cab	2006	3712440



**3707440**  
Chevy/GMC Reg Cab 99-06



**3716940**  
Ford F-Series Crew Cab 04-06



**3712140**  
Dodge Ram Reg. Cab 02-06

More products are available, ask your sales person for details



# WESTIN

## STEP UP PRODUCTS




Life  
WARRANTY



3  
YEAR  
WARRANTY

### 3" ROUND STEP BARS - Application Chart

	YEAR	MAKE/MODEL	SIGNATURE SERIES		E-SERIES		PLATINUM SERIES		
			CHROME	BLACK	POLISHED	BLACK	CHROME	BLACK	
CHEVY	02-07	Avalanche 1500 - w/ cladding	25-3020	25-3025	23-3020	23-3025	26-3020	26-3025	
	03-07	Avalanche 1500 - w/out cladding	25-2990	25-2995	23-2990	23-2995	26-2990	26-2995	
	07	Colorado - Crew Cab	25-3150	25-3155	23-3150	23-3155	26-3150	26-3155	
	04-06	Colorado - Crew Cab	25-2480	25-2485	23-2480	23-2485	26-2480	26-2485	
	99-07	Silverado/GMC Sierra 1500/2500LD - Regular Cab (9)	25-1400	25-1405	23-1400	23-1405	26-1400	26-1405	
	99-07	Silverado/GMC Sierra 1500/2500LD - Ext. Cab, 4 door (9)	25-1680	25-1685	23-1680	23-1685	26-1680	26-1685	
	02-07	Silverado/GMC Sierra 1500HD - Crew Cab (incl.'04-'05 1500LD)	25-1950	25-1955	23-1950	23-1955	26-1950	26-1955	
	01-07	Silverado/GMC Sierra 2500HD/3500 - Regular Cab (9)	25-1400	25-1405	23-1400	23-1405	26-1400	26-1405	
	01-07	Silverado/GMC Sierra 2500HD/3500 - Extended Cab (9)	25-1680	25-1685	23-1680	23-1685	26-1680	26-1685	
	01-07	Silverado/GMC Sierra 2500HD/3500 - Crew Cab (9)	25-1950	25-1955	23-1950	23-1955	26-1950	26-1955	
	00-07	Suburban - ½ ton (excl.'04-'07 Z71 model)	25-2990	25-2995	23-2990	23-2995	26-2990	26-2995	
	00-07	Tahoe - 4 door (excl.'04-'07 Z71 model)	25-3000	25-3005	23-3000	23-3005	26-3000	26-3005	
	02-07	Trailblazer (9)	25-2130	25-2135	—	—	26-2130	26-2135	
	DODGE	05-07	Dakota - Quad Cab	25-2790	25-2795	23-2790	23-2795	26-2790	26-2795
		04-07	Durango - 4 door	25-2630	25-2635	—	—	26-2630	26-2635
		06-07	Ram Mega-Cab	25-2900	25-2905	23-2900	23-2905	26-2900	26-2905
02-07		Ram 1500 - Regular Cab (10)	25-2320	25-2325	23-2320	23-2325	26-2320	26-2325	
02-07		Ram 1500 - Quad Cab (10)	25-2310	25-2315	23-2310	23-2315	26-2310	26-2315	
03-07		Ram 2500/3500 - Regular Cab (10)	25-2320	25-2325	23-2320	23-2325	26-2320	26-2325	
03-07		Ram 2500/3500 - Quad Cab (10)	25-2310	25-2315	23-2310	23-2315	26-2310	26-2315	
FORD	01-07	Escape	25-1970	25-1975	—	—	—	—	
	06-07	Explorer - 4 door	25-3040	25-3045	—	—	26-3040	26-3045	
	02-05	Explorer - 4 door6	25-2070	25-2075	—	—	26-2070	26-2075	
	07	Explorer Sport Trac	TBD	TBD	—	—	TBD	TBD	
	01-06	Explorer Sport Trac	25-1890	25-1895	—	—	26-1890	26-1895	
	04-07	F150 - Regular Cab (excl. Heritage)	25-2340	25-2345	—	—	26-2340	26-2345	
	04-07	F150 - Super Cab (excl. Heritage)	25-2350	25-2355	23-2350	23-2355	26-2350	26-2355	
	04-07	F150 - Supercrew	25-2360	25-2365	23-2360	23-2365	26-2360	26-2365	
	99-07	F250/350/450/550HD Superduty - Regular Cab	25-1320	25-1325	23-1320	23-1325	—	—	
	99-07	F250/350/450/550HD Superduty - Super Cab, 4 door	25-1310	25-1315	23-1310	23-1315	26-1310	26-1315	
	99-07	F250/350/450/550HD Superduty - Crew Cab	25-1330	25-1335	23-1330	23-1335	26-1330	26-1335	
	98-07	Ranger/Ranger "Edge" - Regular Cab (1)	25-2100	25-2105	—	—	—	—	
	98-07	Ranger/Ranger "Edge" - Super Cab, 2 door (1)	25-2110	25-2115	—	—	—	—	
	99-07	Ranger/Ranger "Edge" - Super Cab, 4 door	25-1550	25-1555	—	—	26-1550	26-1555	
	GMC	07	Canyon - Crew Cab	25-3150	25-3155	23-3150	23-3155	26-3150	26-3155
04-06		Canyon - Crew Cab	25-2480	25-2485	23-2480	23-2485	26-2480	26-2485	
02-07		Envoy	25-2130	25-2135	—	—	26-2130	26-2135	
99-07		Sierra "Classic": See CHEVY Silverado Section	—	—	—	—	—	—	
00-07		Yukon, 4 door - ½ ton (excl.'04-'07 Z71 model)	25-3000	25-3005	23-3000	23-3005	26-3000	26-3005	
00-07		Yukon XL - ½ ton (excl.'04-'07 Z71 model)	25-2990	25-2995	23-2990	23-2995	26-2990	26-2995	
00-07		Yukon XL - ¾ ton	25-3010	25-3015	—	—	26-3010	26-3015	
03-06		Pilot	25-2250	25-2255	—	—	26-2250	26-2255	
HONDA	06-07	Ridgeline	25-2880	25-2885	—	—	26-2880	26-2885	
	06-07	H3	25-2860	25-2865	—	—	26-2860	26-2865	
HUMMER	06-07	Commander	25-2970	25-2975	—	—	26-2970	26-2975	
	05-07	Grand Cherokee	25-2970	25-2975	—	—	26-2970	26-2975	
JEEP	07	Wrangler - 4 door	TBD	TBD	TBD	TBD	TBD	TBD	
	05-06	Wrangler - Unlimited	25-2850	25-2855	—	—	26-2850	26-2855	
JEEP	97-06	Wrangler	25-0970	25-0975	23-0970	23-0975	—	—	
	05-06	Wrangler	25-2550	25-2555	—	—	26-2550	26-2555	
NISSAN	104-07	Titan - Extended/King Cab	25-2550	25-2555	—	—	26-2550	26-2555	
	04-07	Titan - Crew Cab	25-2580	25-2585	23-2580	23-2585	26-2580	26-2585	
TOYOTA	06-07	FJ Cruiser	25-3120	25-3125	—	—	26-3120	26-3125	
	05-07	Tacoma - Extended Cab 4 door	25-2670	25-2675	23-2670	23-2675	26-2670	26-2675	
	07	Tacoma - D-Cab	25-2770	25-2775	23-2770	23-2775	26-2770	26-2775	
	05-06	Tacoma - D-Cab (Standard Bed)	25-2650	25-2655	23-2770	23-2775	26-2650	26-2655	
	05-06	Tacoma - D-Cab (Short Bed)	25-2710	25-2715	23-2770	23-2775	26-2710	26-2715	
	07	Tundra - D-Cab	25-3240	25-3245	—	—	26-3240	26-3245	
	07	Tundra - Crew Max	25-3250	25-3255	—	—	26-3250	26-3255	
	04-06	Tundra - D-Cab	25-2400	25-2405	23-2400	23-2405	26-2400	26-2405	
	99-06	Tundra - Extended Cab 4 door	25-2510	25-2515	—	—	26-2510	26-2515	

## FOOTNOTES:

- 1 Requires some drilling.
- 2 Includes Sonoma and ZR2.
- 3 See separate listings for 1999-01 Silverado/Sierra models.
- 4 Excludes 2002 body style sold in 2001.

- 5 Vehicles equipped with cladding will have the step area partially covered when door is closed.
- 6 Minor drilling required on vehicles with rear air and heat. Factory bolt plates must be used.
- 7 Will not adapt to models with factory mud flaps.
- 8 Short Bed models will require relocating the brake line, bracket 25-2718 included in kit.
- 9 Includes New 2007 models.



## PLATINUM SERIES

### Stainless Steel in Chrome or Black

With brilliant chrome plating or black powdercoat on a 3" 304 stainless steel tubing. Westin's Platinum Series step bars are guaranteed not to yellow or tarnish over time, providing maximum rust protection.

- Durable 304 stainless steel with either a chrome plated or semi-gloss black powdercoat finish.
- Adds the perfect finishing touch to personalize the look of trucks and SUV's!
- Customized mounting brackets for each application ensures easy installation and a perfect fit.
- Backed by Westin's exclusive Lifetime Warranty!

## SIGNATURE SERIES

### The Step Bars that Made Westin Famous! Original Signature Series Step Bars

Westin's original Signature Series Step Bar set the quality standard years ago and continues to be the best-selling brand on the market today.

- Choose from a chrome plated or black powdercoat finish.
- Backed by a 3-Year Warranty!

## E-SERIES NEW!

PRODUCT 2007

Westin's NEW line of Step Bars are offered in a highly polished stainless steel for maximum rust protection or a black powdercoated steel.

- Adds the perfect finishing touch to personalize your truck!
- Polished stainless steel backed by Westin's exclusive **LIFETIME WARRANTY** and black powdercoat backed by a 3-Year Warranty.

**Life**  
WARRANTY



### Single Step

For Regular Cab Trucks

### Extended Step

For Extended Cab 2-door Trucks & 2-door SUV's

### Dual Step


For 3 & 4 door Trucks & 4-door SUV's

More products are available, ask your sales person for details



**Wheel-2-Wheel**  
Also available in black stainless!

**3" diameter stainless steel tubing**

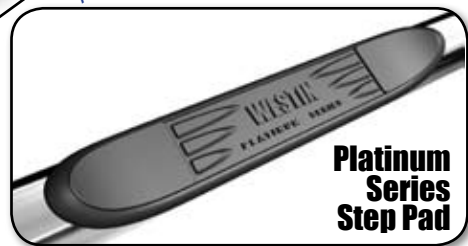

**Platinum Series Step Pad**



**Signature Series Step Pad**

**Platinum Series also available in Cable lengths!**



# PLATINUM SERIES WHEEL-2-WHEEL™ STEP BARS

Steps



	YEAR	MAKE/MODEL	CHROME	BLACK
<b>CHEVY</b>	04-07	CHEVY Silverado 1500 - Crew Cab	24-4150	24-4155
	99-07	CHEVY Silverado 1500LD/2500LD - Extended Cab, 4 door, Short Bed	24-4030	24-4035
	01-07	CHEVY Silverado 2500HD/3500 - Extended Cab, 4 door, Short Bed	24-4030	24-4035
	01-07	CHEVY Silverado 1500HD/2500HD/3500 - Crew Cab, Short Bed	24-4000	24-4005
<b>DODGE</b>	02-07	DODGE Ram 1500 - Quad Cab, Short Bed	24-4080	24-4085
	03-07	DODGE Ram 2500/3500 - Quad Cab, Short Bed	24-4080	24-4085
<b>FORD</b>	04-07	FORD F150 - Super Cab, 4 door (excl. Heritage) Short Bed1	24-4120	24-4125
	04-07	FORD F150 - Supercrew, 4 door (excl. Heritage) Short Bed1	24-4130	24-4135
	99-07	FORD F250/350/450/550HD Superduty - Crew Cab, Short Bed	24-4010	24-4015
<b>GMC</b>	04-07	GMC Sierra 1500 - Crew Cab	24-4150	24-4155
	00-07	GMC Sierra 1500LD/2500LD - Extended Cab, 4 door, Short Bed	24-4030	24-4035
	01-07	GMC Sierra 2500HD/3500 - Extended Cab, Short Bed	24-4030	24-4035
	01-07	GMC Sierra 1500HD/2500HD/3500 - Crew Cab, Short Bed	24-4000	24-4005
<b>TOYOTA</b>	04-06	TOYOTA Tundra - D-Cab, Short Bed	24-4140	24-4145



*Westin* **WESTIN**

Some parts are not legal for sale or use in California on pollution controlled vehicles

# OVAL TUBE STEP

## Aluminum, Stainless or Steel

Westin introduces their **NEW Oval Tube Step** now available in a highly polished 304 stainless steel and black powdercoat on E-Coated mild steel for maximum rust protection. The New Oval Tube Step include a contoured end cap for a stylized finish and a tougher looking raised step pad. Available in 6 sizes: 53", 61.5", 72", 75", 85", and 91". The black powdercoat mild steel tubes are backed by a 3-Year Warranty and polished stainless steel are backed by Westin's exclusive **LIFETIME WARRANTY!**

Westin's **Original Oval Tube Step** is made of extruded aluminum and offers an extra wide step surface for secure footing. It features a grooved step pad to channel water away during rainy weather. The Oval tubes also feature molded end caps for a modern look. Available in 6 sizes: 53", 61.5", 72", 75", 85", and 91". Chrome plated aluminum and black powdercoat aluminum Oval Tubes are backed by Westin's exclusive **LIFETIME WARRANTY!**

**NEW!**  
PRODUCT 2007

New contoured end cap for a stylized finish!



Textured from end-to-end for an extended step surface

UV Resistant Step Pad

Tougher raised saddle Step Pad

	YEAR	MAKE/MODEL	Chrome Aluminum	Black Aluminum	Polished Stainless	Black Steel	Mount Kit	
CHEVY	02-07	Avalanche - w/ cladding	22-0040	22-0045	22-5040	22-5045	22-1535	
	03-07	Avalanche - w/ out cladding	22-0040	22-0045	22-5040	22-5045	22-1535	
	99-07	Silverado 1500/2500LD - Regular Cab	22-0000	22-0005	22-5000	22-5005	22-1085	
	01-07	Silverado 2500HD/3500 - Regular Cab	22-0000	22-0005	22-5000	22-5005	22-1065	
	01-07	Silverado 2500HD/3500 - Extended Cab	22-0020	22-0025	22-5020	22-5025	22-1065	
	01-07	Silverado 1500/2500HD/3500 Crew Cab ('04-'05 1500)	22-0040	22-0045	22-5040	22-5045	22-1075	
	05-07	Suburban (excl. Z71)	22-0040	22-0045	22-5040	22-5045	22-1535	
	05-07	Tahoe - 4 door (excl. Z71)	22-0020	22-0025	22-5020	22-5025	22-1535	
	DODGE	05-07	Dakota - Quad Cab	22-0030	22-0035	22-5030	22-5035	22-1545
		05-07	Dakota - Extended Cab	22-0030	22-0035	22-5030	22-5035	22-1555
02-07		Ram 1500 - Quad Cab2	22-0030	22-0035	22-5030	22-5035	22-1015	
03-07		Ram 2500/3500 - Quad Cab (2)	22-0030	22-0035	22-5030	22-5035	22-1015	
FORD	01-07	Escape	22-0060	22-0065	22-5060	22-5065	22-1625	
	06-07	Explorer - 4 door	22-0020	22-0025	22-5020	22-5025	22-1575	
	04-07	F150 - Regular Cab (excl. Heritage)	22-0000	22-0005	22-5000	22-5005	22-1335	
	04-07	F150 - Super Cab (excl. Heritage) (1)	22-0030	22-0035	22-5030	22-5035	22-1335	
	04-07	F150 - Supercrew (excl. Heritage) (1)	22-0030	22-0035	22-5030	22-5035	22-1335	
	99-07	F250/350/450/550HD Superduty - Regular Cab	22-0000	22-0005	22-5000	22-5005	22-1035	
	99-07	F250/350/450/550HD Superduty - Super Cab	22-0020	22-0025	22-5020	22-5025	22-1035	
	99-07	F250/350/450/550HD Superduty - Crew Cab	22-0040	22-0045	22-5040	22-5045	22-1035	
	99-07	Sierra 1500/2500LD - Regular Cab	22-0000	22-0005	22-5000	22-5005	22-1085	
	00-07	Sierra 1500/2500LD - Extended Cab, 4 dr	22-0020	22-0025	22-5020	22-5025	22-1085	
GMC	01-07	Sierra 2500HD/3500 - Regular Cab	22-0000	22-0005	22-5000	22-5005	22-1065	
	01-07	Sierra 2500HD/3500 - Extended Cab	22-0020	22-0025	22-5020	22-5025	22-1065	
	01-07	Sierra 1500/2500HD/3500 Crew Cab (incl. '04-'05 1500)	22-0040	22-0045	22-5040	22-5045	22-1075	
	05-07	Suburban/Yukon XL (excl. Z71)	22-0040	22-0045	22-5040	22-5045	22-1535	
	05-07	Yukon - 4 door (excl. Z71)	22-0020	22-0025	22-5020	22-5025	22-1535	
	HUMMER	06-07	H3	22-0050	22-0055	22-5050	22-5055	22-1635
03-07		Pilot	22-0050	22-0055	22-5050	22-5055	22-1205	
HONDA	06-07	Ridgeline	22-0030	22-0035	22-5030	22-5035	22-1675	
	05-07	Grand Cherokee	22-0050	22-0055	22-5050	22-5055	22-1645	
JEEP	06-07	Commander	22-0050	22-0055	22-5050	22-5055	22-1645	
	NISSAN	04-07	Titan - Extended/King Cab	22-0020	22-0025	22-5020	22-5025	22-1415
04-07		Titan - Crew Cab	22-0030	22-0035	22-5030	22-5035	22-1415	
TOYOTA	03-07	4-Runner	22-0050	22-0055	22-5050	22-5055	22-1185	
	06-07	FJ Cruiser	22-0060	22-0065	22-5060	22-5065	22-1615	
	05-07	Tacoma - Extended Cab	22-0050	22-0055	22-5050	22-5055	22-1475	
	05-07	Tacoma - D-Cab	22-0030	22-0035	22-5030	22-5035	22-1475	
	07	Tundra - D-Cab	22-0020	22-0025	22-5020	22-5025	22-1665	
	07	Tundra - Crew Max	22-0040	22-0045	22-5040	22-5045	22-1665	



FOOTNOTES:  
1 Requires minor drilling.  
2 #22-1175/1275 have been superseded by #22-1535 on Chevy Avalanche models only.

More products are available, ask your sales person for details






# SPORT TUBES

Steps

Sport Tubes add a nice accent to trucks and SUV's while helping to protect the sides of the vehicle. They fit snug up against the vehicle's rocker panel for maximum ground clearance. They especially look great on lowered trucks! These tubes are available for a variety of vehicles, with the tube diameter sized to match the vehicle. Fullsize and most midsize vehicles get a 2½" tube, and compact vehicles get a 2" tube. Made of chrome-plated stainless steel for minimal maintenance and a long life without rust.

- **Ends curve under vehicle for a great look!**
- **Mount brackets welded directly on tube. Mounts to rocker panel for maximum ground clearance**
- **The tube has a .049 wall thickness**
- **2" to 2.5" dia. 304 stainless steel tubing chrome finish for maximum rust protection and a brilliant shine that will not fade.**

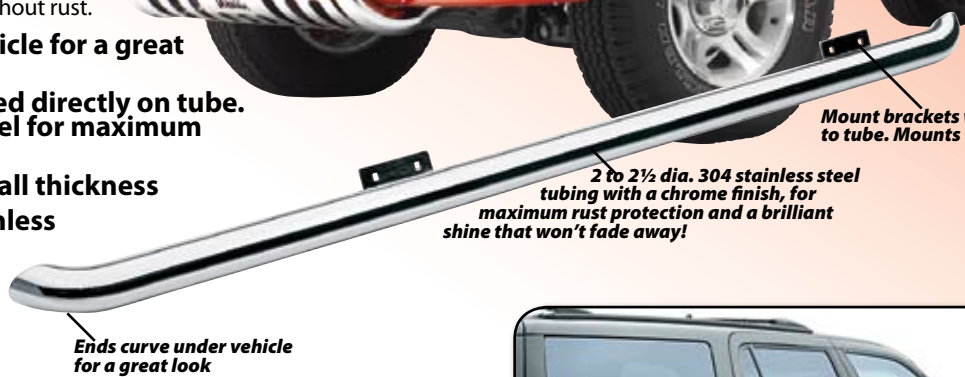

Mount brackets welded directly to tube. Mounts to rocker panel.

2 to 2½ dia. 304 stainless steel tubing with a chrome finish, for maximum rust protection and a brilliant shine that won't fade away!

Ends curve under vehicle for a great look



	YEAR	MAKE/MODEL	CHROME
<b>CADILLAC</b>	06-07	Escalade	28-0430
	06-07	Escalade - EXV / EXT	28-0440
<b>CHEVY</b>	06-07	Avalanche (w/out cladding)	28-0440
	03-05	Avalanche (w/out cladding)	28-0060
	04-07	Colorado - Crew Cab (excl. models w/ Fender Flare Package)	28-0330
	99-07	Silverado "Classic" 1500/2500LD - Ext. Cab (1,2,3)	28-0050
	01-07	Silverado "Classic" 1500HD Crew Cab (incl. 1500LD CC) (1,3)	28-0040
	01-07	Silverado "Classic" 2500/HD3500 - Ext. Cab (1,3)	28-0050
	01-07	Silverado "Classic" 2500HD/3500 - Crew Cab (1,3)	28-0040
	06-07	Suburban - ½ ton	28-0440
	06-07	Tahoe - ½ ton	28-0430
	02-07	Trailblazer - ½ ton	28-0090
<b>DODGE</b>	02-07	Trailblazer EXT	28-0500
	04-07	Durango	28-0390
<b>FORD</b>	02-07	Ram 1500 - Regular Cab ('03-'07 -2500/3500)	28-0370
	02-07	Ram 1500 - Quad Cab ('03-'07 -2500/3500)	28-0030
	04-07	F150 - Regular Cab (excl. Heritage Edition)	28-0270
<b>GMC</b>	04-07	F150 - Super Cab (excl. Heritage Edition)	28-0020
	04-07	F150 - Supercrew	28-0290
	99-07	F250/350HD Superduty - Regular Cab	28-0130
	99-07	F250/350HD Superduty - Super Cab	28-0230
	99-07	F250/350HD Superduty - Crew Cab	28-0080
	01-07	Escape	28-0170
	06-07	Explorer	28-0520
	95-07	Ranger - Extended Cab	28-0340
	04-07	Canyon - Extended Cab	28-0320
	04-07	Canyon - Crew Cab (excl. models w/ Fender Flare Package)	28-0330
<b>TOYOTA</b>	02-07	Envoy - ½ ton	28-0490
	02-07	Envoy XL	28-0510
	97-07	Sierra "Classic" 1500/2500LD - Regular Cab (1,3)	28-0120
	99-07	Sierra "Classic" 1500/2500LD - Extended Cab (1,3)	28-0050
	01-07	Sierra "Classic" 1500HD - Crew Cab (incl. 1500LD CC) (1,3)	28-0040
	01-07	Sierra "Classic" 2500HD/3500 - Regular Cab (1,3)	28-0120
	01-07	Sierra "Classic" 2500HD/3500 - Extended Cab (1,3)	28-0050
	01-07	Sierra "Classic" 2500HD/3500 - Crew Cab (1,3)	28-0040
	06-07	Yukon - ½ ton	28-0430
	000-05	Yukon - ½ ton	28-0420
<b>JEOP</b>	06-07	Yukon XL	28-0440
	00-05	Yukon XL	28-0060
	99-04	Grand Cherokee, Laredo (excl. Limited/Overland Edition)	28-0260
	01-07	Highlander	28-0380

FOOTNOTES:  
1 Minor drilling required.  
2 Excludes S.S. models  
3 Old Body Style



**LIFETIME WARRANTY**



**INNOVATIVE CREATIONS, INC.**



Steps

## Nerf Bars

- Cab-Length & Wheel-to-Wheel Nerf Bars
- Largest Selection Available in the US
- Bright Mirror Finish
- The Highest Quality 16-Gauge 304 Polished Stainless Steel Tube
- Molded Plastic Step Pad
- No-Drill Installation
- Lifetime Warranty
- Available in Black Powder Coated Carbon & Stainless Steel



Call Your  
Total Truck Center  
today for a complete  
listing of part numbers



More products are available, ask your sales person for details



**INNOVATIVE CREATIONS, INC.**



## Oval Bullet Bars

Made from High Polished 304 4" Oval Tube  
 Stainless Steel Welded and Polished End Caps  
 Large No-Crush Step Pad  
 Elegant and Stylish Look  
 Bright Mirror Finish  
 No-Drill Installation

Year	Make/Model	Part#
<b>Chevrolet/GMC</b>		
00-06	Full Size LD/HD E/C 4dr	OVL75CH
01-06	Full Size LD/HD C/C 4dr	OVL88CH
<b>Dodge</b>		
02-06	Full Size Quad Cab 4dr ½ Ton	OVL75DG
03-06	Full Size Quad Cab 4dr ¾ Ton	OVL75DG
06	Mega Cab	OVL96DG
<b>Ford</b>		
04-06	F-150 E/C 4dr	OVL78FD
04-06	F-150 C/C 4dr	OVL80FD
99-06	Super Duty E/C 4dr	OVL72FD
99-06	Super Duty C/C 4dr	OVL85FD



## Side Entry Running Boards

Heavy Duty 18-Gauge Stainless Steel  
 Truck & SUV Application Available  
 Rugged Slip-Resistant Step Pad  
 Easy No-Drill Installation  
 Distinctive Appearance  
 Bright Mirror Finish



Call Your  
 Total Truck Center  
 today for a complete  
 listing of part numbers

# BIG COUNTRY

## TRUCK ACCESSORIES

### Wheel to Wheel Step Bars

#### FEATURES

- ▶ Extra length and step for easy access to bed or tool box.
- ▶ Easy bolt-on, No drill installation non-skid step pads at each door for safe entry & exit
- ▶ Designed and custom-fit to each specific vehicle
- ▶ Constructed of rugged 3" round steel tubing for maximum strength
- ▶ Manufactured to ISO-9001:2000 Certified quality standards for value that lasts.
- ▶ Covered by the best warranty in the industry.
- ▶ Snap-on UV resistant step features non exposed mounting points avoids corrosion potential.
- ▶ Plastic end caps insulate inside of bar and avoid metal to metal contact between bar and bracket



37328 Ford F-150 04-07



Dually Side Bar

Finish Available	Add Digit	Warranty
Black powder coat with durable semi-gloss finish.	-1	
Triple-nickel Chrome Plated Steel.	-3	
T-304 Stainless Steel polished to a mirror finish.	-4	

MAKE	VEHICLE	BED	YEAR	PART NO.
Chevrolet	Silverado 1500HD, 2500HD, 3500 Crew Cab	5.5'	99-07	37302
Chevrolet	Silverado 1500HD, 2500HD, 3500 Crew Cab	6'	99-07	37301
Chevrolet	Silverado 2500HD Crew Cab 2&4 WD	8'	01-07	37401
Chev/GMC	Silverado / Sierra 1500, 2500HD Extended Cab.	short	99-07	37376
Chev/GMC	Silverado / Sierra 1500, 2500HD, 3500 Extended Cab.	long	00-07	37476
Dodge	Mega Cab	6.5'	06-07	37324
Dodge	Ram 1500, 2500, 3500 Quad Cab (New Body Style)	8'	02-07	37423
Dodge	Ram Quad Cab (New Body Style)	6.5'	02-07	37323
Ford	F-250, F-350 Super Duty Crew Cab	short	01-07	37330
Ford	F-250, F-350 Super Duty Crew Cab 4dr 2&4 WD	long	99-07	37430
Ford	F-250, F-350 Super Duty Super Cab	short	99-07	37332
Ford	F-250, F-350 Super Duty Super Cab 4dr 2&4 WD	long	99-07	37432
Ford	F-Series Super Cab (New Body Style)	5.5'	04-07	37327
Ford	F-Series Super Cab (Heritage)	6.5'	97-05	37329
Ford	F-Series Super Crew 4dr (New Body Style)	5.5'	04-07	37328
Ford	F-Series Super Cab (New Body Style)	6.5'	04-07	37427

### Stake Pocket Bed Rail



Black Powder Coat

Triple nickel Chrome Plated

T-304 Stainless Steel



#### FEATURES

- ▶ Easy bolt-on, No drill installation.
- ▶ Welded base plate for extra strength and easy installation.
- ▶ Glued foam mounting gasket avoids metal contact.
- ▶ Choose stake pocket rails for a custom fit or universal rails for any application T-304
- ▶ Stainless mirror finish base plate and bolts eliminates rust potential.

MAKE	VEHICLE	BED	YEAR	PART No.
Chevrolet	Silverado	5.7'	2007	1077
Chevrolet	Silverado	6.5'	2007	1078
Chev/GMC	Pick Up Classic	8'	99-06	1074
Chev/GMC	Pick Up Classic	6.5'	99-06	1075
Chev/GMC	Pick Up Classic	5.5'	04-05	1076
Dodge	Pick Up	Long	99-07	1074
Dodge	Pick Up	Short	99-07	1075
Ford	F-150 New Body Style (Heritage 97-05)	Long	04-07	1064
Ford	F-150 New Body Style (Heritage 97-05)	Short	04-07	1065
Ford	F-Series Super Duty	Long	99-07	1039
Ford	F-Series Super Duty	Short	99-07	1065
Ford	Ranger (USA)	Long	92-05	1063
Ford	Ranger (USA)	Short	92-05	1060
Nissan	Titan King Cab	6.5'	04-07	1058
Nissan	Titan Crew Cab	5.5'	04-07	1059
Toyota	Tundra	Long	95-05	1089
Toyota	Tundra	Short	95-05	1088
Universal	Rear Stake Pocket / Front Drill			1014

FINISH AVAILABLE	ADD DIGIT	WARRANTY
	-1	Black powder coat with durable semi-gloss finish.
	-3	Triple-nickel Chrome Plated Steel.
	-4	T-304 Stainless Steel polished to a mirror finish.

### Tubular & Oval Side Bars

**BIG COUNTRY** Side Bars are a custom-fit for each application and require **NO DRILLING** for simple installation. Our Side Bars are precision-formed on our computer-controlled equipment using 3" diameter tubing based on our ISO-9001:2000 certified quality standards. Available in Black zinc based powder coat finish as well as chrome finish. Each Chrome Side Bar is hand polished then receives a bright triple nickel plus chrome plating in our state-of-the-art chrome plating facility. Also our Stainless Steel Side Bars with mirror finish with Life time warranty and our Chrome over T-304 Stainless Steel finish is unequaled by any other, we guarantee it not only against corrosion but also the bright chrome finish for LIFE! The Side Bars also features a non-slip, black composite step. You won't find a better fitting, better finished, more durable side bars anywhere. All necessary hardware, brackets and instructions are included.

#### FEATURES

- NEW sleek, contemporary design to accent each vehicle
- Extra-wide oval step means easier, safer entry & exit
- Non skid UV resistant step pads at each door standard
- Easy bolt-on, No drill installation
- Certified quality standards for value that lasts
- Covered by the best warranty in the industry
- Snap-on step features non exposed mounting points
- Constructed of rugged 3" round steel tubing for maximum strength
- Custom designed for each specific vehicle. Bracket support on tube ends gives clean bar look
- Non-skid step pads at each door for safe entry & exit Designed and custom-fit to each specific vehicle



	Finishes Available	Add Digit	Warranty
	Black powder coat with durable semi-gloss finish.	-1	
	Triple-nickel Chrome Plated Steel.	-3	
	T-304 Stainless Steel polished to a mirror finish.	-4	<b>Lifetime</b> warranty



# BIG COUNTRY

## TRUCK ACCESSORIES



MAKE	VEHICLE	YEAR	PART No.
Chevrolet	Avalanche 2500 3/4 ton	02-06	37179
Chevrolet	Avalanche 1500 w/o cladding	2007	37016
Chevrolet	Colorado Crew Cab	04-07	37104
Chevrolet	Colorado Extended Cab	04-07	37103
Chevrolet	Colorado Regular Cab	04-07	37102
Chevrolet	Tracker 4dr	99-04	37018
Chevrolet	Trailblazer (std. length only, not XL)	02-07	37173
Chevrolet	Trailblazer Extended / Envoy XL	02-07	37273
Chev/GMC	Silverado 1500, 2500 / Sierra, Cheyenne Regular Cab	99-07	37074
Chev/GMC	Silverado 1500, 2500 / Sierra Cheyenne Extended Cab 3&4 dr	99-07	37176
Chev/GMC	Silverado 1500, 2500HD, 3500 / Sierra Crew Cab 4 dr	01-07	37201
Chev/GMC	Silverado 2500HD, 3500 / Sierra Regular Cab	01-07	37074
Chev/GMC	Silverado 2500HD, 3500 / Sierra Extended Cab 4 dr	01-07	37176
Chev/GMC	Suburban / Yukon XL 1/2 ton	00-06	37079
Chevrolet	Suburban 1/2 ton	2007	37115
Chev/GMC	Tahoe / Yukon 4dr	2007	37016
GMC	Tahoe, Yukon, Sonora 4dr	00-05	37078
Dodge	Dakota Regular Cab	97-04	37024
Dodge	Dakota Club Cab 3dr	00-04	37026
Dodge	Dakota Club Cab 3dr	05-07	37126
Dodge	Dakota Quad Cab 4dr 2 WD	05-07	37125
Dodge	Durango	98-03	37027
Dodge	Durango	04-06	37127
Dodge	Ram Quad Cab 1500, 2500, 3500 (New Body Style)	02-06	37123
Dodge	Ram Mega Cab	06-07	37124
Dodge	Ram Regular Cab (New Body Style)	02-06	37121
Ford/Mazda	Escape / Tribute	01-06	37167
Ford	Excursion	00-07	37138
Ford	Expedition	03-06	37239
Ford	Explorer 4dr	02-05	37166
Ford	Explorer 4dr	06-07	37266
Ford	F-150 Lobo Regular Cab (Heritage)	97-05	37033
Ford	F-150 Lobo Super Cab 3 & 4dr (Heritage)	97-05	37029
Ford	F-150 Lobo Super Crew Cab 4dr (Heritage)	01-05	37069
Ford	F-150 Lobo Regular Cab (New Body Style)	04-07	37133
Ford	F-150 Lobo Super Cab (New Body Style)	04-07	37129
Ford	F-150 Lobo Super Crew Cab (New Body Style)	04-07	37169
Ford	F-250HD, F-350 Super Duty Super Cab	99-07	37032
Ford	F-250HD, F-350, F-450, F-550 Super Duty Regular Cab	99-07	37039
Ford	F-250HD, F-350, F-450, F-550 Super Duty Crew Cab	99-07	37030
Ford	Ranger / Ranger Edge Super Cab 4dr	99-07	37067
Ford	Sport Trac	01-05	37168
Ford	Sport Trac	06-07	37266
Honda	CR-V	05-06	37294
Honda	CR-V	2007	37096
Honda	Pilot	03-05	37195
Honda	Ridgeline	06-07	37092
Hummer	H2	02-07	37019
Hummer	H3	05-07	37119
Jeep	Grand Cherokee 4dr	99-04	37044
Jeep	Grand Cherokee	05-06	37144
Jeep	Liberty	02-07	37046
Jeep	Wrangler Unlimited	05-07	37141
Jeep	Wrangler (except Unlimited & Unlimited Rubicon)	87-06	37140
Mercedes	ML-Series	98-05	37001
Nissan	Frontier King Cab 2dr (USA)	05-07	37254
Nissan	Frontier Crew Cab (USA)	05-07	37256
Nissan	Pick Up D-21 Doble Cabina	00-07	37156
Nissan	Pathfinder 4dr	99.5-04	37153
Nissan	Titan Crew Cab	04-07	37059
Nissan	Titan King Cab	04-07	37058
Nissan	Xterra	99-04	37055
Nissan	Xterra	05-07	37155
Suzuki	Grand Vitara 2&4 WD ( Accent tube)	06-07	60218
Toyota	FJ Cruiser	06-07	37064
Toyota	Highlander	03-05	37098
Toyota	Rav4	01-05	37086
Toyota	Rav4	06-07	37186
Toyota	Tacoma Regular Cab 4wd.	95-04	37081
Toyota	Tacoma Extended Cab 4wd.	95-04	37083
Toyota	Tacoma Crew Cab 4wd.	01-04	37087
Toyota	Tacoma Extended Cab	05-07	37183
Toyota	Tacoma Double Cab Long Bed ( 6' )	05-07	37187
Toyota	Tacoma Double Cab Short Bed ( 5' )	05-07	37188
Toyota	Tundra Extended Cab	99-05	37089
Toyota	Tundra Double Cab	04-06	37189
Toyota	Tundra Regular Cab	2007	37182
Toyota	Tundra Double Cab	2007	37289

More products are available, ask your sales person for details

Total Truck Centers 97

# DEEZEE<sup>®</sup> Nerf Steps

The Quality Truck Accessory People

## Chrome & Polished Stainless Steel 3" Round & 4" Oval Nerf Steps

- Chromed stainless steel that will never rust
- Polished stainless steel with a mirror shine
- Molded plastic step pad and hidden bracing
- No drill custom fit applications

## Chrome XT 5" Oval Nerf Steps

- Chrome finish on Aluminum tubing



## Sentinel Running Boards

DeeZee set the next standard in running boards with the Sentinel Running Boards. The full length aluminum extrusion is designed for today's vehicles with a clean yet beefy look. Molded plastic step pads provide excellent footing while the endcaps are specially designed for proper drainage. The stainless steel accent piece adds to the distinct look. Pre-assembled from the factory to cut down on installation time.



## Guardian Running Boards

Unique three piece mud flap/endcap system that easily fits most vehicles. Even today's body cladding and fender flares will not interfere with this innovative running board. The Guardian extrusion incorporates stylish aluminum ribbing to provide safe footing while entering and exiting the vehicle. The Guardian Black has a black extrusion with the same formed ribbing. The composite trim pieces on both are molded in black with a light texture to match your truck or SUV's factory trim and they can be painted to add a custom look. Guardians ship pre-assembled to make these boards a snap to install.



Paint to match your vehicle's factory colors or install right out of the box

Year	Model	Bed	3" Round Chrome SS	3" Round Polished SS	4" Oval Polished SS	5" Oval Chrome XT
<b>CHEVY</b>						
2007	Avalanche (4WD & 2WD)	1500 (1/2 Ton) Models		DZE370603		
01-06	Avalanche (4WD & 2WD)	1500 (1/2 Ton) Models	DZE370792	DZE370773	DZE370777	
2007	Silverado/Sierra	Reg Cab all bed sizes	DZE371512	DZE371513	DZE371517	DZE17051
2007	Silverado/Sierra	Ext Cab 6'+8' bed	DZE371522	DZE371523	DZE371527	DZE17052
2007	Silverado/Sierra	Crew Cab all bed sizes	DZE371532	DZE371533	DZE371537	DZE17053
99-06	Silverado/Sierra PU	Reg Cab all bed sizes	DZE370742	DZE370743	DZE370747	
99-06	Silverado/Sierra PU	Ext Cab (4 dr) 6'+8' bed	DZE370762	DZE370763	DZE370767	DZE17001
99-06	Silverado/Sierra PU	Ext Cab (3 dr) 6'+8' bed	DZE370752	DZE370763	DZE370767	DZE17001
99-06	Silverado/Sierra PU	Crew Cab 5.5'+6'+8' bed	DZE371012	DZE371013	DZE371017	DZE17002
04-07	Colorado/Canyon	Reg Cab	DZE371022			
04-07	Colorado/Canyon	Ext Cab	DZE371032	DZE371033		
04-07	Colorado/Canyon	Crew Cab		DZE371043		
02-06	Trailblazer/Envoy		DZE371732			
2007	Tahoe/Yukon		DZE371552	DZE371553	DZE371557	
00-06	Tahoe/Yukon/Escalade	DZE370782	DZE370783	DZE370787		
02-06	Cadillac Escalade EXT		DZE370792	DZE370773	DZE370777	
2007	Suburban/Yukon XL	1500 (1/2 Ton) Models	DZE371542	DZE371543	DZE371547	
00-06	Suburban/Yukon XL	1500 (1/2 Ton) Models	DZE370792	DZE370773	DZE370777	
00-06	Suburban/Yukon XL	2500 (3/4 Ton) Models	DZE371792	DZE370773	DZE370777	
<b>DODGE</b>						
03-07	Ram PU	Reg Cab all bed sizes	DZE371212	DZE371213		
03-07	Ram PU	Quad Cab 6'+8' bed	DZE371232	DZE371233	DZE371237	DZE17000
03-07	Ram PU	Mega Cab (2006)	DZE371241		DZE371249	
05-07	Dakota PU	Club Cab all bed sizes	DZE371262	DZE371263		
05-07	Dakota PU	Quad Cab	DZE371252	DZE371253		
04-06	Durango		DZE371272			
<b>FORD</b>						
00-07	Excursion		DZE371381			
02-05	Explorer 4 dr		DZE371661			
00-06	Sport Trac		DZE371681			
01-07	Escape		DZE371672			
04-07	F150 PU	Reg Cab all bed sizes	DZE371332		DZE371337	
04-07	F150 PU	Super Cab 6.5' bed	DZE371292	DZE371293	DZE371297	DZE17007
04-07	F150 PU	Super Cab 8' bed	DZE371292	DZE371293	DZE371297	DZE17007
04-07	F150 PU	Crew Cab 6.5' bed	DZE371692	DZE371693	DZE371697	DZE17008
04-07	F150 PU	Crew Cab 5.5' or 8' bed	DZE371692	DZE371693	DZE371697	DZE17008
2004	F150 PU (Heritage)	Reg Cab all bed sizes			DZE370337	
2004	F150 PU (Heritage)	Super Cab 4dr 6'-8' bed	DZE370292		DZE370297	DZE17005
2004	F150 PU (Heritage)	Super Cab 3dr 6'-8' bed	DZE370282		DZE370297	DZE17005
2004	F150 PU (Heritage)	Super Crew Cab	DZE370692	DZE370693	DZE370697	DZE17006
99-07	Super Duty PU	Reg Cab all bed sizes	DZE370392	DZE370393		
99-07	Super Duty PU	Super Cab 6'+8' bed	DZE370322	DZE370323	DZE370327	DZE17003
99-07	Super Duty PU	Crew Cab 6'+8' bed	DZE370302	DZE370303	DZE370307	
<b>TOYOTA</b>						
00-06	Tundra PU	Access Cab	DZE370892	DZE370893		
03-06	Land Rover/Freelander		DZE371342			
<b>JEEP</b>						
05-07	Grand Cherokee		DZE371442			
06-07	Commander			DZE370633		
2007	Wrangler			DZE370643		
02-07	Liberty		DZE370462			
<b>NISSAN</b>						
04-06	Titan	King Cab	DZE370582			
04-06	Titan	Crew Cab	DZE370592			
<b>HUMMER</b>						
03-06	Hummer H2		DZE370192			
<b>HONDA</b>						
06-07	Ridgeline			DZE371953		
03-06	CRV		DZE371942			

Steps  
TRUCK & SUV ACCESSORIES

# Running Boards



Elite Running Boards

FX Running Boards

Brite Tread

## Elite Running Boards

These boards feature heavy-duty stainless steel mud flaps and stainless steel end caps with one-of-a-kind black accent trim. The special full length ribbed rubber stepping surface provides secure footing and sturdy, rust-resistant braces offer support. Constructed of high quality stainless steel and polished to a brilliant shine, these boards look great on any hard-working truck. Complete the look with matching stainless side box boards.



## FX Style Running Boards

Recognized by the distinct rounded outside edge and OEM-approved black vehicle trim, FX boards have a style all their own. Available in several styles and finishes with secure footing provided by cushioned step pads. Rubber gaskets between the board and rocker resist gravel build up. Matching side box boards complete the look.

## Brite Tread Running Boards

The classic style that started it all for DeeZee. Our non-rusting Brite Tread aluminum construction running boards provide excellent footing and the tough, rugged look you're after. The BriteGard powder-coating prevents oxidation so that they will look great years from now.

Year	Model	Cab Style	Sentinel	Guardian Aluminum	Guardian Black	Elite Stainless	FX Series Extended	FX Series Black	Brite Tread
<b>CHEVY/GMC</b>									
2007	Silverado/Sierra (Deep Drop Boards)	Regular Cab	DZE14051				DZEFX11951	DZEFX11351	DZE1051
2007	Silverado/Sierra (Deep Drop Boards)	Extended Cab	DZE14052	DZE13052	DZE13352	DZEE19952	DZEFX11952	DZEFX11352	DZE1052
2007	Silverado/Sierra (Deep Drop Boards)	Crew Cab	DZE14053	DZE13053	DZE13353	DZEE19953	DZEFX11953	DZEFX11353	DZE1053
2007	Silverado/Sierra (Deep Drop Boards)	6' Bed Side Box Board	DZE14058	DZE13058	DZE13358	DZEE19958	DZEFX11958	DZEFX11358	DZE1058
2007	Silverado/Sierra (Deep Drop Boards)	8' Bed Side Box Board	DZE14059	DZE13059	DZE13359	DZEE19959	DZEFX11959	DZEFX11359	DZE1059
99-06	Silverado/Sierra (Deep Drop Boards)	Regular Cab	DZE14037	DZE13037	DZE13337	DZEE19937	DZEFX11937	DZEFX11337	DZE1037
99-06	Silverado/Sierra (Deep Drop Boards)	Extended Cab	DZE14038	DZE13038	DZE13338	DZEE19938	DZEFX11938	DZEFX11338	DZE1038
99-06	Silverado/Sierra (Deep Drop Boards)	Crew Cab	DZE14039	DZE13039	DZE13339	DZEE19939	DZEFX11939	DZEFX11339	DZE1039
99-06	Silverado/Sierra (Deep Drop Boards)	6' Bed Side Box Board	DZE14048	DZE13048	DZE13348	DZEE18948	DZEFX12948	DZEFX12348	DZE1348
99-06	Silverado/Sierra (Deep Drop Boards)	8' Bed Side Box Board	DZE14049	DZE13049	DZE13349	DZEE18949	DZEFX12949	DZEFX12349	DZE1349
99-06	Silverado/Sierra (Deep Drop Boards)	8' Bed Dually Side Box Board				DZEE18950		DZEFX12350#	DZE1350
04-07	Colorado/Canyon	Extended Cab		DZE13034	DZE13334				
04-07	Colorado/Canyon	Crew Cab		DZE13035	DZE13335				
02-06	Trailblazer/Envoy	Standard Wheel Base		DZE13030	DZE13330		DZEFX11928	DZEFX11328	
02-06	Trailblazer/Envoy	EXT - Extended Wheel Bases		DZE13032	DZE13332				
2007	Avalanche		DZE14045	DZE13045	DZE13345				
02-07	Equinox						DZEFX11940	DZEFX11340	
00-05	Tahoe/Yukon 4 dr						DZEFX17931		
2007	Tahoe/Yukon		DZE14050	DZE13050	DZE13350		DZEFX11940	DZEFX11340	
<b>DODGE</b>									
03-07	Ram	Reg Cab				DZEE39922	DZEFX31922		DZE3020
03-07	Ram	Quad Cab	DZE34023	DZE33023	DZE33323	DZEE39923	DZEFX31923	DZEFX31323	DZE3021
03-07	Ram	Mega Cab (2006)	DZE34026				DZEFX31926		
03-07	Ram	6' Bed Side Box Board	DZE34072	DZE33072		DZEE38946	DZEFX32946		DZE3307
03-07	Ram	8' Bed Side Box Board	DZE34073	DZE33073	DZE33373	DZEE38947	DZEFX32947		DZE3308
03-07	Ram	8' Bed Dually Side Box Board				DZEE38948			DZE3309
05-07	Dakota PU	Club Cab		DZE33024	DZE33324		DZEFX31924	DZEFX31324	
05-07	Dakota PU	Quad Cab (4 full doors)	DZE34025	DZE33025	DZE33325		DZEFX31925	DZEFX31325	
2007	Nitro		DZE34027						
<b>FORD</b>									
00-06	Excursion			DZE23057					
02-06	Explorer 4 dr			DZE23059	DZE23359				
04-07	F150 PU	Reg Cab	DZE24061	DZE23060	DZE23360		DZEFX21961	DZEFX21361	DZE2040
04-07	F150 PU	Super Cab	DZE24062	DZE23061	DZE23361		DZEFX21962	DZEFX21362	DZE2041
04-07	F150 PU	Super Crew Cab	DZE24063				DZEFX21963	DZEFX21363	
04-07	F150 PU	6.5' Bed Side Box Board	DZE24074	DZE23074	DZE23374		DZEFX22968	DZEFX22368	DZE2343
04-07	F150 PU	8' Bed Side Box Board	DZE24075	DZE23075	DZE23375		DZEFX22969	DZEFX22369	DZE2344
2004	F150 PU Heritage	Reg Cab			DZE29944				DZE2031
2004	F150 PU Heritage	Super Cab		DZE23047			DZEFX21947		DZE2035
2004	F150 PU Heritage	6.5' Bed Side Box Board		DZE23070			DZEFX22962	DZEFX22362	
99-07	Super Duty PU	Reg Cab	DZE24050	DZE23050=	DZE23350=	DZEE29948=	DZEFX21950=	DZEFX21350=	DZE2036=
99-07	Super Duty PU	Super Cab	DZE24051		DZE23351=	DZEE29949=	DZEFX21951=	DZEFX21351=	DZE2037=
99-07	Super Duty PU	Crew Cab	DZE24052			DZEE29943=	DZEFX21952=	DZEFX21352=	DZE2038=
99-07	Super Duty PU	6' Bed Side Box Board	DZE24072	DZE23072			DZEFX22967=		DZE2309=
99-07	Super Duty PU	8' Bed Side Box Board	DZE24073			DZEE28943=		DZEFX22365=	DZE2310=
99-07	Super Duty PU	8' Dually Side Box Board				DZEE28940=	DZEFX22966#	DZE2311=	
<b>TOYOTA</b>									
01-06	Sequoia			DZE63017	DZE63317				
00-06	Tundra PU	Access Cab		DZE63016	DZE63316				

\* will not fit vehicles with rocker panel cladding or fender flares + will not fit Eddie Bauer series, vehicles with fender flares, or XLT models  
# the FX style Dually Side Box Board is NonFlaring = will not fit 2005-2006 models with extra wide flares

More products are available, ask your sales person for details

Total Truck Centers 99

MANY MORE PRODUCTS & APPLICATIONS AVAILABLE. CALL OR STOP BY TODAY FOR PRICING AND AVAILABILITY.

ACCESSORIES TRUCK & SUV



**PREMIUM  
AUTOMOTIVE  
ACCESSORIES**



**INDUSTRIES, INC.**

**Multi-Fit  
Running Boards  
& Tube Steps**

**13 Different  
Board Systems**

**Easy to install no  
drill installation systems utilize  
custom fit brackets all boards are  
available in a variety of lengths for a custom  
fit appearance**



Order one OE Style No Drill Bracket or EZ Bracket Mounting Kit for your vehicle and choose any board style and/or finish  
OE Style No Drill Bracket (sold separately)  
EZ Brackets (sold separately)

Year	Vehicle	Board Size	EZ Bracket Kit	OE Style No Drill Bracket	Tube Step Chrome	Tube Step Black
<b>Chevrolet</b>						
07	Pickup, Silverado/Sierra Standard Cab (New Body Style)	54"	300066	310066**	226010	226011
01-07	Pickup, Silverado/Sierra Classic Hvy. Duty Std Cab	54"	300002	310002**	226010	226011
04-07	Pickup, Colorado/Canyon Standard Cab	54"	300039	—	226010	226011
04-07	Pickup, Colorado/Canyon Extended Cab	70"	300040	310040**	226020	226021
04-07	Pickup, Colorado/Canyon Crew Cab	80"	300041	310041**	226030	226031
06-07	Tahoe	90"	—	310065**	226040	226041
07	Pickup, Silverado/ Sierra Ext. Cab (New Body Style)	80"	300067	310067**	226030	226031
99-07	Pickup, Silverado Classic Ext. Cab 3 or 4 dr	80"	300001	310001**	226030	226031
01-07	Pickup, Silverado/ Sierra Classic Heavy Duty Extended Cab	80"	300001	310001**	226030	226031
07	Pickup, Silverado/Sierra Crew Cab (New Body Style)	90"	300068	310068**	226040	226041
01-07	Pickup, Silverado/Sierra Classic Crew Cab	90"	300000	310000**	226040	226041
01-07	Pickup, Silverado/Sierra Classic Heavy Duty Crew Cab	90"	300000	310000**	226040	226041
06-07	Suburban 1500/Yukon/Yukon XL	90"	—	310065**	226040	226041
<b>Dodge</b>						
02-07	Pickup, Ram 1500 Standard Cab	54"	300016	310016**	226010	226011
03-07	Pickup, Ram 2500 Standard Cab	54"	300016	310016**	226010	226011
05-07	Pickup, Dakota Quad Cab	80"	300057	310057**	226030	226031
02-07	Pickup, Ram 1500 Quad Cab	80"	300015	310015**	226030	226031
03-07	Pickup, Ram 2500 Quad Cab	80"	300015	310015**	226030	226031
04-07	Durango	80"	300045**	310045**	226030	226031
<b>Ford</b>						
99-07	Pickup, F350/450/550 Super Duty Std Cab	54"	300010**	310010**	226010	226011
04-07	Pickup, F150 Super Crew Cab (New Body Style)	90"	300037**	310037**	226040	226041
04-07	Pickup, F150 Super Cab (New Body Style)	80"	300038**	310037**	226030	226031
02-07	Explorer	80"	300011**	310011**	226030	226031
99-07	Pickup, F250 Super Duty Ext. Cab	70"	300009**	310009**	226020	226021
99-07	Pickup, F350/450/550 Super Duty Ext. Cab	70"	300009**	310009**	226020	226021
97-06	Expedition	80"	300026**	310026**	226030	226031
99-07	Pickup, F250 Super Duty Crew Cab	90"	300008**	310008**	226040	226041
99-07	Pickup, F350/450/550 Super Duty Crew Cab	90"	300008**	310008**	226040	226041
<b>JEEP</b>						
06-07	Commander	70"	300063	—	226020	226021
05-07	Grand Cherokee	70"	300051**	310051**	226020	226021
05-07	Liberty	70"	300058	—	226020	226021
<b>Nissan</b>						
05-06	Pickup, Frontier King Cab	70"	300061	310061**	226020	226021
05-06	Pickup, Frontier Crew Cab	80"	300061	310061**	226030	226031
04-06	Pickup, Titan King Cab	80"	300046**	310046**	226030	226031
04-06	Pickup, Titan Crew Cab	80"	300047**	310047**	226030	226031
<b>Toyota</b>						
00-06	Pickup, Tundra Extended Cab	70"	300022	—	226020	226021
04-06	Pickup, Tundra Double Cab	80"	300043	310043**	226030	226031
05-06	Pickup, Tacoma Access Cab	70"	300054**	310054**	226020	226021
05-06	Pickup, Tacoma Double Cab	80"	300054**	310054**	226030	226031
05-06	Pickup, Tacoma Double Cab	90"	300054**	310054**	—	—
03-06	4-Runner	70"	300032	—	226020	226021

### OE Style No Drill Bracket

Lund's new OE Style No Drill Bracket brackets work with the new Lund Tube Step as well as all existing Lund Multi-Fit Running Boards. Each of the application-specific brackets aligns with the pre-drilled holes in the vehicle's body. The new wide brackets are constructed of durable 12-gauge steel for exceptional strength and support.

### Tube Steps

Lund's new Tube Step features a stylish 5-inch wide oval tube design with integrated stylish step treads for sure footing, no matter the conditions. The Tube Step is constructed of durable, yet lightweight, aluminum for years of corrosion-free service. Lund offers the Tube Step in four lengths, 54, 70, 80 and 90 inches, for a custom fit. It is available in two finishes, polished chrome and black powder coat, to complement any vehicle's look.

### Factory Style Running Boards

Get the from-the-factory look with Lund Factory Style molded running boards. Made of heavy-duty polymer materials with full-step aluminum support, our running boards come in lighted and non-lighted models and four multi-fit lengths.

### Runners™

Runners™ truck steps have an aggressive molded tubular look that adds high style to current model trucks. Featuring an impact-resistant ABS plastic shell and tough tubular steel body-mount bracketry, Runners come in two multi-fit styles, include all mounting hardware and can be painted to match your vehicle.

### Rad Step™

Put some attitude in your step with Lund Rad Steps™ elliptical aluminum steps. Featuring a radical, elliptical design and heavy-duty extruded aluminum construction, Rad Step offers textured black or paintable ABS shells, a styled rubbered step tread and three multi-fit lengths for a wide variety of vehicles.

### Step Rails™

Made of durable aluminum to eliminate rust and corrosion, Lund StepRails™ elliptical aluminum steps are a heavy-duty accessory for the life of your truck. Featuring thick, non-slip treads, and five multi-fit lengths to fit standard and extended cab pickups and popular SUVs. StepRails are available with black or brite finish and adjustable end caps for a custom-fit appearance.




Curved Tube Step		Factory Style		TrailRunners		24" StepRails		24" StepRails		RadStep	RadStep
Chrome	Black	Unlighted	Lighted	Aluminum Extruded Brite	Aluminum Extruded Black	TrailRunners Aluminum Diamond	Aluminum Extruded Black	Aluminum Extruded Brite	Black Textured	Paintable	
226110	226111	—	—	291111	291110	261210	281001	271010	—	—	
226110	226111	—	—	291111	291110	261210	281001	271010	—	—	
226110	226111	—	—	291111	291110	261210	—	271010	—	—	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226140	226141	—	—	—	—	—	271041	271040	273040	273041	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226140	226141	—	—	—	—	—	271041	271040	273040	273041	
226110	226111	—	—	291111	291110	261210	281001	271010	—	—	
226110	226111	—	—	291111	291110	261210	281001	271010	—	—	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226110	226111	—	—	291111	291110	261210	281001	271010	—	—	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226140	226141	221040	221041	291141	291140	261240	271041	271040	273040	273041	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226120	226121	—	—	—	—	—	271021	271020	273020	273021	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226130	226131	—	—	291131	291130	261230	271031	271030	273030	273031	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226130	226131	221030	221031	291131	291130	261230	271031	271030	273030	273031	
226120	226121	221020	221021	291121	291120	261220	271021	271020	273020	273021	
226130	226131	—	—	291131	291130	261230	—	—	—	—	
226120	226121	—	—	—	—	—	271041	271040	273040	273041	
226120	226121	—	—	—	—	—	271021	271020	273020	273021	

More products are available, ask your sales person for details

# SURE GRIP™ - Aluminum Running Boards

Step out from the crowd with Westin's Sure Grip Running Boards. Made from extruded aluminum and topped off with a super high-grip rubberized step pad for secure footing and U.V. resistant molded polymer end caps. Available in Brushed Anodized, Black Powdercoat or the NEW brilliant Chrome finish. The boards are available in five lengths; 54", 69", 72", 79", and 93" with vehicle-specific mount kits sold separately. Optional LED Light Kits may be purchased separately to increase step visibility in low-light situations.

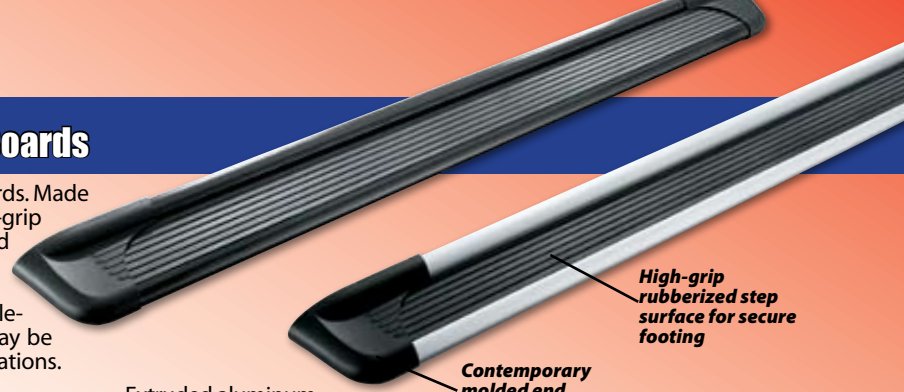

High-grip rubberized step surface for secure footing

Contemporary molded end caps

Extruded aluminum baseboard with clear brushed or black powdercoat and "NEW" Chrome plated finish.



## OPTIONAL LIGHT KIT #27-6000

Light Kit Assembly is positioned anywhere along the board and wired to illuminate when the door is opened. The lights are extremely bright and long lasting and the housing is made of UV-stabilized black polymer. Set of four lights and complete wiring harness included. Professional installation is advised for wiring hookup. 12 Month Warranty

Available in 5 lengths: 54", 69", 72", 79" & 93"  
See Applications Guide

	YEAR	MAKE/MODEL	CHROME	BRUSHED Aluminum	BLACK Powdercoat	MT. Kit	
CHEVY	02-07	Avalanche 1500 (w/ cladding)	27-6540	27-6140	27-6145	27-1645	
	03-07	Avalanche 1500 (w/ out cladding)	27-6540	27-6140	27-6145	27-1645	
	04-07	Colorado - Crew Cab (4)	27-6530	27-6130	27-6135	27-1595	
	07	Silverado/Sierra 1500/2500/3500 - Crew Cab	27-6540	27-6140	27-6145	27-1755	
	99-07	Silverado/Sierra 1500/2500LD - Ext Cab	27-6530	27-6130	27-6135	27-1025	
	01-07	Silverado/Sierra 2500HD/3500 - Ext Cab	27-6530	27-6130	27-6135	27-1025	
	01-07	Silverado/Sierra "Classic" 1500/2500HD/3500 - Crew Cab	27-6540	27-6140	27-6145	27-1285	
	05-07	Suburban (excl. Z71) (4)	27-6540	27-6140	27-6145	27-1645	
	05-07	Tahoe - 4 door (excl. Z71) (4)	27-6530	27-6130	27-6135	27-1645	
	02-07	Trailblazer (excl. SS models)	27-6520	27-6120	27-6125	27-1355	
	02-07	Trailblazer EXT	27-6540	27-6140	27-6145	27-1495	
	DODGE	05-07	Dakota - Quad Cab	27-6530	27-6130	27-6135	27-1655
		04-07	Durango (4)	27-6530	27-6130	27-6135	27-1545
	FORD	02-07	Ram 1500 - Quad Cab ('03-'07 2500/3500) (7)	27-6530	27-6130	27-6135	27-1375
98-06		Excursion (4)	27-6540	27-6140	27-6145	27-1215	
FORD	97-06	Expedition	27-6530	27-6130	27-6135	27-1195	
	06-07	Explorer - 4 door	27-6530	27-6130	27-6135	27-1675	
	04-07	F150 - Regular Cab (excl. Heritage) (4)	27-65102	27-61102	27-61152	27-1535	
	04-07	F150 - Super Cab (excl. Heritage) (4)	27-6530	27-6130	27-6135	27-1525	
	04-07	F150 - Supercrew (4)	27-6540	27-6140	27-6145	27-1535	
	99-07	F250/350/450/550HD Superduty - Extended Cab	27-6530	27-6130	27-6135	27-1205	
	99-07	F250/350/450/550HD Superduty - Crew Cab (4)	27-6540	27-6140	27-6145	27-1215	
	GMC	02-07	Envoy	27-6520	27-6120	27-6125	27-1355
		02-07	Envoy XL	27-6540	27-6140	27-6145	27-1495
		04-07	Canyon - Crew Cab (4)	27-6530	27-6130	27-6135	27-1595
99-07		Sierra: See Chevy Silverado Section	—	—	—	—	
05-07		Yukon - 4 door (excl. Z71) (4)	27-6530	27-6130	27-6135	27-1645	
00-04		Yukon - 4 door (excl. '04 Z71) (4)	27-6530	27-6130	27-6135	27-1035	
05-07		Yukon XL (excl. Z71) (4)	27-6540	27-6140	27-6145	27-1645	
00-04		Yukon XL (excl. '04 Z71)	27-6540	27-6140	27-6145	27-1035	
HONDA HUMMER ISUZU		02-05	Pilot	27-6510	27-6110	27-6115	27-1445
		06-07	H3	27-6520	27-6120	27-6125	27-1735
	03-07	Ascender - 5 Passenger	27-6520	27-6120	27-6125	27-1355	
	03-07	Ascender - 7 Passenger	27-6540	27-6140	27-6145	27-1495	
	MERCURY NISSAN	02-05	Mountaineer	27-6530	27-6130	27-6135	27-1345
		04-07	Titan - Extended/King Cab (4)	27-6520	27-6120	27-6125	27-1565
	OLDSMOBILE TOYOTA	04-07	Titan - Crew Cab (4)	27-6530	27-6130	27-6135	27-1565
		05-07	Frontier - King/Crew Cab (4)	27-6520	27-6120	27-6125	27-1635
		02-07	Bravada	27-6520	27-6120	27-6125	27-1355
		06-07	Rav-4	27-6510	27-6110	27-6115	27-1705
01-07		Sequoia (4)	27-6530	27-6130	27-6135	27-1325	
05-07		Tacoma - Extended Cab (4)	27-6520	27-6120	27-6125	27-1615	
05-07		Tacoma - D-Cab (Short & Long Bed) (4)	27-6530	27-6130	27-6135	27-1615	
07		Tundra - D-Cab	27-6530	27-6130	27-6135	27-1725	
07		Tundra - Crew Max	27-6540	27-6140	27-6145	27-1725	
04-06		Tundra - D-Cab	27-6530	27-6130	27-6135	27-1325	



# MOLDED STEP BOARDS - Lighted & Unlighted

Customize your truck or SUV with Westin's Molded Step Boards. The molded polymer U.V. resistant board is mounted to a strong extruded aluminum base board. The boards are available in lighted or unlighted styles.

- Installers prefer Westin's ~ No drill installation
- Three lengths: 72", 79" & 93"
- Customized Mounting Brackets are sold separately to ensure a perfect fit.
- Backed by a 5-Year Warranty.



U.V. Resistant molded polymer step surface will not fade or crack under harsh conditions

Safety lights turn on when door is opened



	YEAR	MAKE/MODEL	UNLIGHTED STEP BOARD	LIGHTED STEP BOARD	MOUNT KIT	
CHEVY	02-07	Avalanche 1500 (w/ cladding)	27-0020	—	27-1645	
	03-07	Avalanche 1500 (w/ out cladding)	27-0020	—	27-1645	
	04-07	Colorado - Crew Cab (1)	27-0010	27-0015	27-1595	
	07	Silverado/Sierra 1500/2500/3500 - Crew	27-0020	27-0025	27-1755	
	99-07	Silverado/Sierra 1500/2500LD - Ext Cab	27-0010	27-0015	27-10252	
	01-07	Silverado/Sierra 2500HD/3500 - Ext Cab	27-0010	27-0015	27-1025	
	01-07	Silverado/Sierra "Classic" 1500/2500HD/3500 - Crew	27-0020	27-0025	27-1285	
	05-07	Suburban (excl. Z71) (1)	27-0020	27-0025	27-16452	
	05-07	Tahoe - 4 door (excl. Z71) (1)	27-0010	27-0015	27-16452	
	02-07	Trailblazer (excl. SS models)	27-0000	27-0005	27-1355	
	02-07	Trailblazer EXT	27-0020	27-0025	27-1495	
	DODGE	05-07	Dakota - Quad Cab	27-0010	27-0015	27-1655
		04-07	Durango (1)	27-0010	27-0015	27-1545
	FORD	02-07	Ram 1500 - Quad Cab ('03-'07 2500/3500) (3)	27-0010	27-0015	27-1375
98-06		Excursion (1)	27-0020	27-0025	27-1215	
97-06		Expedition	27-0010	27-0015	27-1195	
06-07		Explorer - 4 door	27-0010	27-0015	27-1675	
GMC	04-07	F150 - Super Cab (excl. Heritage) (1)	27-0010	27-0015	27-1525	
	04-07	F150 - Supercrew (1)	27-0020	27-0025	27-1535	
	99-07	F250/350/450/550HD Superduty - Extended Cab	27-0010	27-0015	27-1205	
	99-07	F250/350/450/550HD Superduty - Crew (1)	27-0020	27-0025	27-1215	
	02-07	Envoy	27-0000	27-0005	27-1355	
	02-07	Envoy XL	27-0020	27-0025	27-1495	
	04-07	Canyon - Crew (1)	27-0010	27-0015	27-1595	
	99-07	Sierra: See Chevy Silverado "Classic" Section	—	—	—	
	05-07	Yukon - 4 door (excl. Z71) (1)	27-0010	27-0015	27-16452	
	05-07	Yukon XL (excl. Z71)(1)	27-0020	27-0025	27-16452	
HUMMER	06-07	H3	27-0000	27-0005	27-1735	
NISSAN	04-07	Titan - Extended/King Cab (1)	27-0000	27-0005	27-1565	
	04-07	Titan - Crew Cab (1)	27-0010	27-0015	27-1565	
TOYOTA	05-07	Frontier - King/ Crew Cab (1)	27-0000	27-0005	27-1635	
	06-07	Rav-4	—	—	27-1705	
	01-07	Sequoia (1)	27-0010	27-0015	27-1325	
	05-07	Tacoma - Extended Cab (1)	27-0000	27-0005	27-1615	
	05-07	Tacoma - D-Cab (Short & Long Bed) (1)	27-0010	27-0015	27-1615	
	07	Tundra - D-Cab	27-0010	27-0015	27-1725	
07	Tundra - Crew Max	27-0020	27-0025	27-1725		



FOOTNOTES:  
 1 No Drill Application.  
 2 Gap strip recommended for application, Part #27-9901 (sold separately).  
 3 Excludes Daytona, Rumble Bee & SRT-10 models.

More products are available, ask your sales person for details